- If you would like to add the MEG IRD to your internal network, please follow this procedure to change the MGMT & Data ip addresses. (default ip 192.168.2.20/24 Interface-3)
 - While in Channel View, Access Advanced View by clicking on the 3 lines in the upper left corner (*Figure-1*)
 - Click Advanced View to go to Advanced View page (*Figure-1*)
 - Browse to Configuration page, then click Network
- Double click on the ip address you would like to change.
 - Enp6s0 is assigned to MGMT-1*(Figure-2)*
 - *You must put a /24 at the end of the ip. (or whatever subnet mask your IT department assigns you). (Figure-2)
 - Enp7s0 is assigned to Data-1 for Multicast (Figure-2)
 - SET DEFAULT GATEWAY ACCORDING TO YOUR NETWORK. (Figure-3)
- Click apply all when finished to apply new settings. Click yes to restart the node. You may see a quick hit.
- For TSoip configurations, the Multicast address is already set.
 - $\circ~$ Please refer to the correct SOP for the associated address and port #.
- See *Figure-4* for physical Ethernet port assignments.

Figure-1



F-1

Figure-2

	Network Port Type Other Reload All Apply All Back Validate Network Settings	s → (Alias Double click here to change MGMT-1 ip. Click apply all when finished.	Double click here to change Data-1 ip. Click apply all when finished.	
l	Bond Configuration 🕜				
l	Name Network Interface Mode MII poli	ing interval Ma	ac Policy Preferred Slave		
	Add Row Remove Selected Bonds				
l	Network Settings				
l	Network Interface VLA	N Port	IP Address	Routing Table	Action
l	enp0s20f0u14u4				Add VLAN
	enp4s0	Port 3	192.168.12.76/24 fe80::76fe 48ff:fe8b:448/64	4	Add VLAN
l	enp5s0		10.4.11.7 /24		Add VLAN
	enp6s0		+ 10.121.20.21 5/24	+	Add VLAN
	enp7s0	SDI over IP 1	10.100.10.55/24		Add VLAN

Figure-3

Default Gateway Settings 🚱							
	Network Interface	IP Address	Metric				
×	enp6s0 •	192.168.2.1	0				
Add Row Remove Selected Interfaces							

Figure-4

