Synamedia MEG IRD - How To Turn LNB Voltage

Task- Configuring MEG IRD

Condition- Turning DC Voltage on to power LNB

Standard- How to activate IRD DC Voltage for MEG IRD


- o Begin by **Browsing to IP** of MEG IRD (Default ip 192.168.2.20)
 - Enter UN & PW (see figure 1) (UN: Admin; PW: Password)

Figure-1



- Navigate to Advanced View by clicking 3 lines in upper left corner
 - Expand I/O on the left (input) section
 - You should now see DVBS2 1
 - Right Click on DVBS2 1
 - Click on configuration (see figure-2)

Figure-2

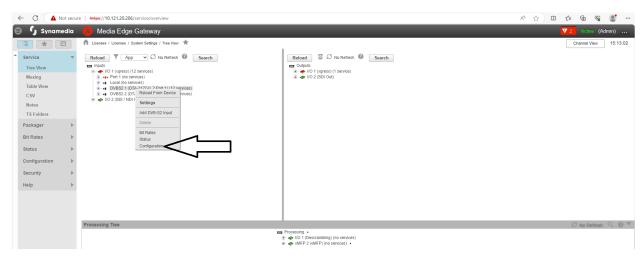

- You should now see the PCI card configuration
- Scroll to the bottom of the page and locate DVB-S2 Port Setting
 - Next, click the dropdown under LNB Settings / Polarization (see figure-3)
 - Choose Horizontal
 - Navigate back to the top of the page and hit Apply
- LNB Voltage is now active

Figure-3

